Lesson 11 HC-SR04 Ultrasonic Sensor Module

Introduction

In this lesson, you will learn how to use an HC-SR04 Ultrasonic Sensor to distance measurements, which is great for all kind of projects that need distance measurements, avoiding obstacles as examples.

Hardware Required

- ✓ 1 * RexQualis UNO R3
- ✓ 1 * Ultrasonic Sensor Module
- ✓ 4 * F-M Jumper Wires



Principle

HC-SR04 Ultrasonic Sensor Module

Ultrasonic Sensor emits ultrasound at 40000 Hz which travels through the air and if there is an object or obstacle on its path It will bounce back to the module. Considering the travel time and the speed of the sound you can calculate the distance.

In order to generate the ultrasound ,you need to set the Trig on a High State for 10us. That will send out an 8 cycle sonic burst which will travel at the speed sound and it will be received in the Echo pin. The Echo pin will output the time in microseconds the sound wave traveled.



Test distance = (high level time \times velocity of sound (340m/s) /2

For example, if the object is 10 cm away from the sensor, and the speed of the sound is 340 m/s or 0.034 cm/µs the sound wave will need to travel about 294 u seconds. But what you will get from the Echo pin will be double that number because the sound wave needs to travel forward and bounce backward. So in order to get the distance in cm we need to multiply the received travel time value from the echo pin by 0.034 and divide it by 2.

Code interpretation

#include "SR04.h"

#define TRIG_PIN 12 //pin 12 on the arduino

#define ECHO_PIN 11 //pin 11 on the arduino

SR04 sr04 = SR04(ECHO_PIN,TRIG_PIN);

long a;

void setup() {

Serial.begin(9600);

delay(1000);

```
void loop() {
a=sr04.Distance();
Serial.print(a);
Serial.println("cm");
delay(1000);
```

}

}

Experimental Procedures

Step 1:Build the circuit

The HC-SR04 Ultrasonic Module has 4 pins, Ground, VCC, Trig and Echo. The Ground and the VCC pins of the module needs to be connected to the Ground and the 5 volts pins on the Arduino Board respectively and the trig and echo pins to any Digital I/O pin on the Arduino Board.



Schematic Diagram



Step 2:Open the code:HC-SR04_Ultrasonic_Sensor_Module_Code

Blinking_LED_Co File Edit Sketch	ode Arduino 1 Tools Help	.8.5			
				ø	
🎒 Open an Ardı	uino sketch				×
查找范围(I):	퉬 HC-SRO4_VI t	rasonic_Sensor_Module_Cod 👻	G 🗊 🖡	> 🛄 ح	
C.	名称	<u>^</u>	修改	收日期	i
最近访问的位置 桌面 扉 作 计算机	[™] HC-SR04_U	lltrasonic_Sensor_Module_Cod	e.ino 201	17/12/20 21	.27
	٠ [III			F
网络	对象名称(20):	Tilt_Ball_Switch_Code.ino		• [打·	тw
	对象类型(I):	All Files (*.*)		•	网消
Global variables u	use 9 bytes (0%)	of dynamic memory, leaving 2	2039 bytes i	For 1	al
•	III.	Arduino/Genuir	no Uno on <u>CO</u>	M118	

Step 3: Attach Arduino UNO R3 board to your computer via USB cable and check that the 'Board Type' and 'Serial Port' are set correctly.

Step 4: Load the Library:HC-SR04

💿 Select a zip f	ile or a folder co	ntaining the library you'd like to add	
Look <u>i</u> n:	🌗 Libraries	• 🦸	⊳ 🛄 ح
最近使用	HC-SR04.zip		
桌面			
我的文档			
() 计算机			
(
	File <u>n</u> ame:	itorial - Word V4.0/Lesson 11 HC-SR04 Ultrasonic Sensor Module/Librari	es Open
	Files of <u>t</u> ype:	ZIP files or folders	▼ Cancel

Step 5:Upload the code to the RexQualis UNO R3 board.

Step 6:Open the Serial Monitor then you can see the data as below:

(How to use the Serial Monitor is introduced in details in Lesson 0 Preface)

交 COM118 (Arduino/Genuino Uno)	
	Send
8cm	*
8 cm	
Scm	
8 cm	
7 cm	
6 cm	
6 cm	
5 cm	
5 cm	
5 cm	
4cm	
3 cm	
4cm	
5 cm	
6 cm	
7 cm	E
9 cm	
10 cm	
11 cm	
11 cm	
12cm	
13 cm	
5 cm	
2 cm	
2 cm	
2 cm	
	•
Autoscroll	No line ending V 9600 baud V Clear output

Then, You can test the distance between the ultrasound module and the wall by moving the ultrasound module, and it will show on the monitor.



If it isn' t working, make sure you have assembled the circuit correctly, verified and uploaded the code to your board. For how to upload the code and install the library, check Lesson 0 Preface.