Lesson 19 Thermometer

Introduction

In this lesson, you will learn how to use an LCD display to show the temperature.

Hardware Required

- ✓ 1 * RexQualis UNO R3
- ✓ 1 * LCD1602 module
- ✓ 1 * 10k ohm Resistor
- ✓ 1 * Thermistor
- ✓ 1 * Potentiometer
- ✓ 1 * Breadboard
- ✓ 18 * M-M Jumper Wires

Principle

Thermistor

The Thermistor is a type of resistor whose resistance is dependent on temperature end have an electric resistance value for each absolute temperature.

Thermistor widely used to control the temperature in electronics devices such as alarms, thermometers, "clocks", electronic circuit temperature compensation, heat sinks, air conditioning. There are two basic types of thermistors: a PTC thermistor (Positive Temperature coefficient) which substantially increases its electrical resistance with increased temperature, and the thermistor NTC (Negative Temperature coefficient), which substantially lowers its electrical resistance with increased temperature. The thermistor is not electrically polarized. The most common thermistor in the electronics store is the NTC type, so I will be using this for the application.

The major problem NTC thermistor is the calibration, that is, to establish a function between electrical resistance and temperature. The variation in its electrical resistance with temperature is non-linear it may be seen as an exponential function according to equation Steinhart-Hart.

Code interpretation

```
#include <LiquidCrystal.h>
```

```
int tempPin = 0;
```

// BS E D4 D5 D6 D7

```
LiquidCrystal lcd(7, 8, 9, 10, 11, 12);
void setup()
{
    lcd.begin(16, 2);
}
void loop()
{
    int tempReading = analogRead(tempPin);
    // This is OK
```

```
double tempK = log(10000.0 * ((1024.0 / tempReading - 1)));
```

```
tempK = 1 / (0.001129148 + (0.000234125 + (0.0000000876741 * tempK *
```

```
tempK )) * tempK ); // Temp Kelvin
```

float tempC = tempK - 273.15; // Convert Kelvin to Celcius

float tempF = (tempC * 9.0)/ 5.0 + 32.0; **// Convert Celcius to Fahrenheit**

```
/* replaced
float tempVolts = tempReading * 5.0 / 1024.0;
float tempC = (tempVolts - 0.5) * 10.0;
float tempF = tempC * 9.0 / 5.0 + 32.0;
*/
// Display Temperature in C
```

lcd.setCursor(0, 0);

Icd.print("Temp C ");

// Display Temperature in F

```
//lcd.print("Temp F ");
```

lcd.setCursor(6, 0);

// Display Temperature in C

lcd.print(tempC);

// Display Temperature in F

//lcd.print(tempF);

delay(500);

}

Experimental Procedures

Step 1:Build the circuit



Schematic Diagram



Step 2:Open the code:Thermometer_Code

Blinking_LED_C File Edit Sketch	Code Arduino 1 Tools Help	L.8.5	C		
00 De				Ø	
🎒 Open an Ard	luino sketch				×
查找范围(I):	퉬 Thermomete	r_Code	• 0	🦻 📂 🛄 🕶	
E1	名称	· ·		修改日期	i
最近访问的位置	Contract Thermome	eter_Code.ino		2017/12/20 21:25	+
桌面 桌面 库 计算机					
	•	- III -			F
网络	对象名称(01):			▼ 打开 (0)
	对象类型(T):	All Files (*.*)		▼ 取消	
					ai
Global variables The library "RexQ	use 9 bytes (0% ualis UNO R3 St) of dynamic memory,] arter Kit Tutorial - 1	leaving 2039 N ford V4.0″ car	bytes for 1 anot be use -	
•	,III			+	
		Ardu	ino/Genuino Uno	o on COM118	

Step 3: Attach Arduino UNO R3 board to your computer via USB cable and check that the 'Board Type' and 'Serial Port' are set correctly.

💿 Select a zip f	ile or a folder co	ntaining the library you'd like to add	X
Look in:	🕕 Libraries	•] 🏚 🛛	۶ 🛄 -
夏 夏夏夏夏夏夏夏夏夏夏夏夏夏夏夏夏夏夏夏夏夏夏夏夏夏夏夏夏夏夏夏夏夏夏夏	EiquidCrysta	l.zip	
眞面			
我的文档			
《 】 计算机			
() 网络			
	File name:	UNO R3 Starter Kit Tutorial - Word V4.0/Lesson 19 Thermometer/Libraries	; Open
	Files of type:	ZIP files or folders	Cancel

Step 4: Load the Library:LiquidCrystal

Step 5:Upload the code to the RexQualis UNO R3 board.

Then, you can see the temperature on the LCD display. As you change the temperature of the thermistor, the temperature displayed on the LCD display will change accordingly.



If it isn' t working, make sure you have assembled the circuit correctly, verified and uploaded the code to your board. For how to upload the code and install the library, check Lesson 0 Preface.